

User Manual

BIRDY WPs-r2

Firmware: Version 1.0.1





Table of content

I.	BIRDY WPs-R2 presentation.....	4
1.	Mechanical presentation	4
2.	Icons description	4
3.	Symbols description	5
4.	Menus description	5
II.	Important information	6
III.	Clip fitting on the rear case of the pager	7
IV.	Using.....	8
1.	Switching on BIRDY WPs	8
2.	Switching off BIRDY WPs	8
3.	Reading a received message	8
4.	Erasing all the messages	8
5.	Identities management	8
6.	Time setting	9
7.	Winter/summer time	9
8.	Alarm setting	9
9.	Quiet period setting	9
10.	Low battery warning	10
11.	Choice of ring	10
12.	Vibrate	10
13.	Zoom	10
14.	Charger light	11
15.	Keyboard sound	11
16.	Language	11
17.	Technical menu	11
18.	User profile	12









I. BIRDY WPs-R2 presentation

1. Mechanical presentation



2. Icons description

	Power-on indicator light		Alert message in memory
	Active ringtone		Read alert message
	Programmed alarm clock		Battery level



3. Symbols description

According to the chosen menu, keys may have different meanings. That's the reason why a symbol is displayed above the keys on the screen in order to give the meaning of the keys.

Symbol	Description
✓	The key relates to the « validation » function
x	The key relates to the « cancellation » function
♪	The key relates to the « sound testing » function
↑ ↓	Possible using of keys ▼ and ▲
< >	Possible using of keys ◀ and ▶

4. Menus description

Menu	Description
◆	Profile : profile selection
↵	Technical menu : composed by 7 sub-menus among which : Version : EEPROM and software versions indication Battery level : battery tension level indication
🕒	Time / alarm clock setting : time and alarm clock setting
🎵	Ringtone selection : selection of the ringtone
🔊	Vibrator : selection of the vibrator functioning mode
🔍	Zoom : selection of the characters' display size
📄	Language : selection of the pager language
⌨	Keyboard : composed by 2 sub-menus Keyboard locking : activation or inactivation of the keyboard locking Keyboard sound : activation or inactivation of the keyboard sounds
🔌	Switch off : BIRDY WPs shut down



II. Important information

Open the Birdy WPs-R2 with a coin of 2 euros cents




Insert the battery in the indicated direction.





III. *Clip fitting on the rear case of the pager*

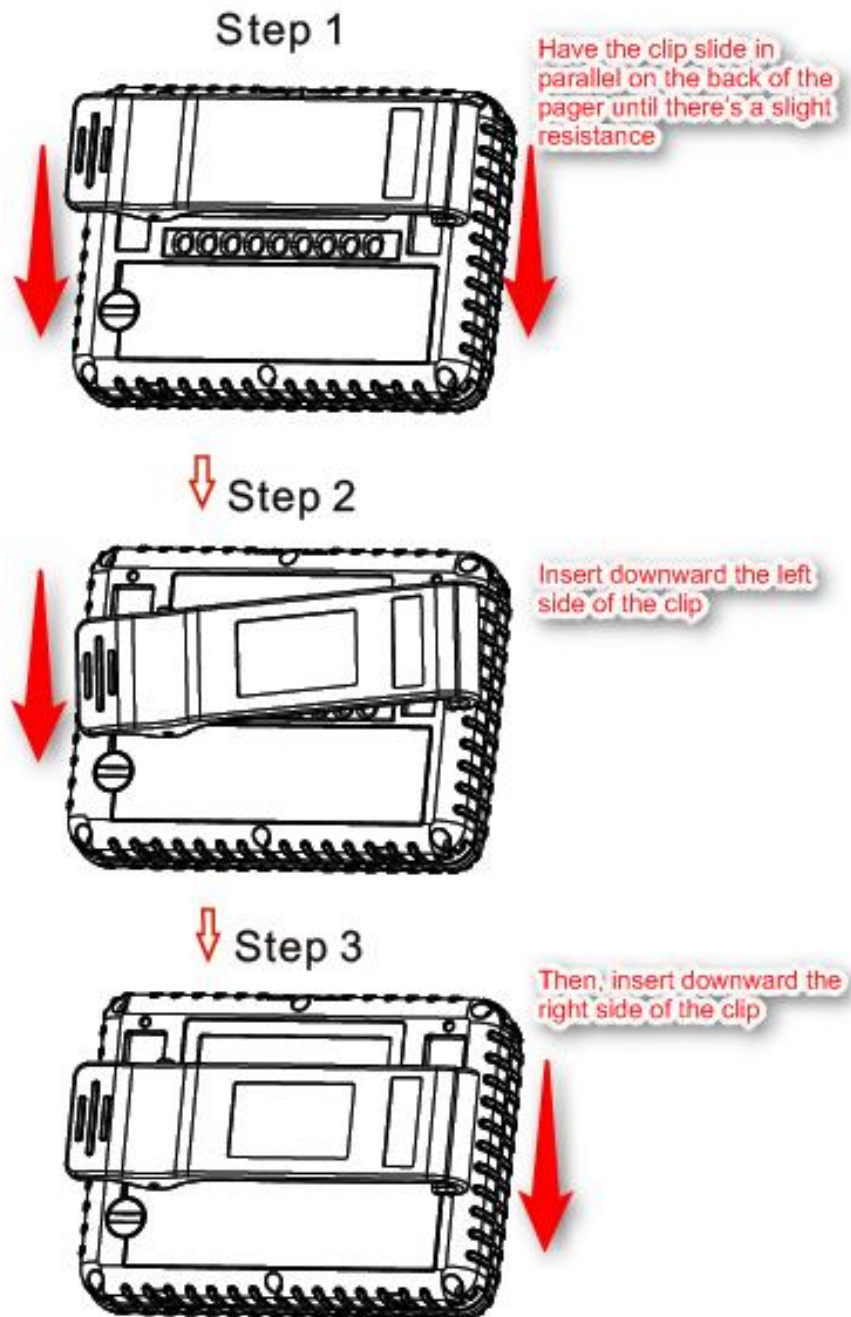







IV. Using




1. Switching on BIRDY WPs

1. Press key  during 5 seconds





2. Switching off BIRDY WPs

1. Press key 
2. Go to SWITCH OFF menu thanks to the keys 
3. Press key 
4. Press key 









3. Reading a received message

1. Press key 
2. The first line displays the message number with date and time
3. The remaining part of the displayed text is the received message
4. If the text is long, press keys  to scroll the message text
5. Key  enables to save or erase the message

4. Erasing all the messages « »







1. Press key 
2. Go to ERASE ALL menu thanks to keys 
3. Press key 
4. Press again  to confirm

5. Identities management « »






1. Press key 
2. Press key  to go to TECHNICAL MENU
3. Press key 
4. Press key  to select identity
5. Press key  to access to one identity
6. Press key  or  to change identity
7. Press key  to confirm










6. Time setting « »

1. Press key  to access to the menu
2. Press key  to go to the TIME SETTING menu
3. Press key  to confirm menu
4. Press key  or  to set time
5. Press key  to confirm







7. Winter/summer time « »

1. Press key  to access menu
2. Press key  to go to the CLOCK SETTING menu
3. Press key  to go to SUMMER TIME or WINTER TIME
4. Press key  to confirm menu
5. Press key  to activate

8. Alarm setting « »







1. Press key  to access menu
2. Press key  to go to the CLOCK SETTING menu
3. Press key  to go to ALARM SETTING
4. Press key  to access menu
5. Press key  or  to set time
6. Press key  to confirm

9. Quiet period setting « »







1. Press key  to access menu
2. Press key  to go to QUIET PERIOD
3. Press key  to access menu
4. Press key  or  to set time
5. Press key  to confirm








10. Low battery warning « »

1. Press key  to access menu
2. Press key  to go to BATTERY WARNING
3. Press key  to access menu
4. Press key  or  to set time
5. Press key  to confirm






11. Choice of ring « »

1. Press key  to access menu
2. Press key  to go to the CHOICE OF RING menu
3. Press key  to confirm
4. Press key  to choose ring
5. Press key  to listen to a ring tone
5. Press key  to confirm

12. Vibrate « »






1. Press key  to access menu
2. Press key  to go to the VIBRATE menu
3. Press key  to confirm
4. Press key  to choose profile
5. Press key  to confirm

13. Zoom « »






1. Press key  to access menu
2. Press key  to go to the ZOOM menu
3. Press key  to confirm
4. Press key  to choose
5. Press key  to confirm








14. *Charger light* « »

1. Press key  to access menu
2. Press key  to go to the CHARGER LIGHT menu
3. Press key  to access menu
4. Press key  to validate the option or  to disable it











15. *Keyboard sound* « »

1. Press key  to access menu
2. Press key  to go to the KEYBOARD menu
3. Press key  to confirm
4. Press key  to go to the KEYBOARD SOUND menu
5. Press key  to confirm

16. *Language* « »




1. Press key  to access menu
2. Press key  to go to the LANGUAGE menu
3. Press key  to confirm
4. Press key  to choose language
5. Press key  to confirm

17. *Technical menu*




- *Version* «  »
 1. Press key  to access menu
 2. Press key  to go to the technical menu
 3. Press key  to go to the menu VERSION and check the version
- *LCD contrast* «  »
 1. Press key  to access menu
 2. Press key  to go to the technical menu
 3. Press key  to go to the LCD CONTRAST and check
 4. Press key  to manage contrast
 5. Press key  to confirm







- Serial number «  »

1. Press key  to access menu
2. Press key  to go to the technical menu
3. Press key  to go to the SERIAL NUMBER and check





- Battery level «  »

1. Press key  to access menu
2. Press key  to go to the technical menu
3. Press key  to go to the BATTERY LEVEL and check

- Autotest «  »

1. Press key  to access menu
2. Press key  to go to the technical menu
3. Press key  to go to the AUTOTEST
5. Press key  to confirm

18. User profile « »

1. Press key  to access menu
2. Press key  to confirm PROFILE menu
2. Press keys  to choose one profile
4. Press once more on  to confirm the profile selection